

14.5x20.5cm (23-0608)

***KRAFT&DELE***  
*professional*

KD640



**THANK YOU FOR PURCHASING WORK BENCH**



**Warning**


Adults assembly required.

During assembly, keep all parts away from children. Choking hazard- small part.


Check regularly to ensure all fasteners are tight.



## Parts

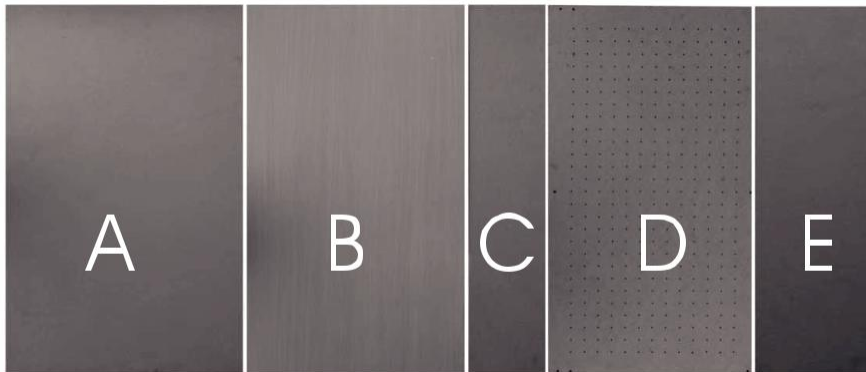

- Ⓐ Base board(1195X590X9mm)
- Ⓑ Counter top board(1195X590X6mm)
- Ⓒ Top board(1197X218X6mm)
- Ⓓ Hole board(1190X560X3mm)
- Ⓔ Drawer board(1085X456X6mm)

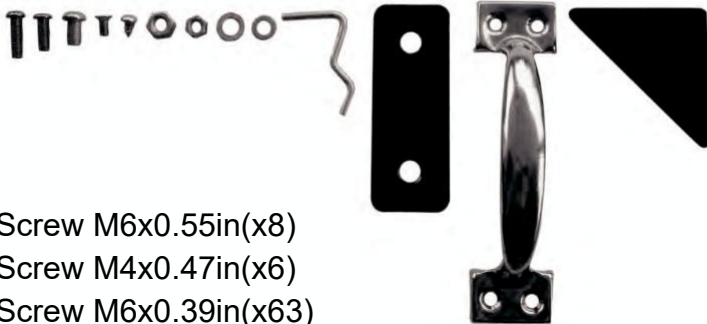

- ① Screw M6x0.55in(x8)
- ② Screw M4x0.47in(x6)
- ③ Screw M6x0.39in(x63)
- ④ Screw M4x0.39in(x8)
- ⑤ Tapping screw(x4)
- ⑥ Nut M6(x71)
- ⑦ Nut M4(X14)
- ⑧ Gasket M6(x71)
- ⑨ Gasket M4(x14)
- ⑩ Hook(x12)
- ⑪ Plate(x1)
- ⑫ Handle(x2)
- ⑬ Triangle plastic parts(x4)



- |        |        |
|--------|--------|
| ⑭ (x2) | ⑳ (x2) |
| ⑮ (x2) | ㉑ (x2) |
| ⑯ (x1) | ㉒ (x1) |
| ⑰ (x1) | ㉓ (x1) |
| ⑱ (x4) | ㉔ (x1) |
| ㉀ (x4) | ㉕ (x1) |
| ㉁ (x2) | ㉖ (x1) |


## Part 1




- 1) Put the right and left brackets (15) and (15) of the perforated board on a flat surface.




- 2) Fit the transverse bar (14) between the brackets of the perforated board.(using 2 pcs 3 screws M6X0.39in )

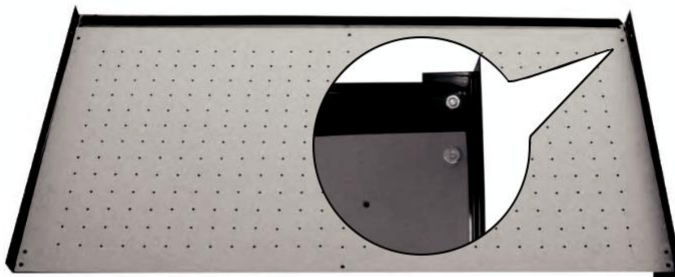

- 3) Use the screw M6X0.5512in to fix the perforated board to the frame.(using 3 pcs 1 screws M6X0.55in)

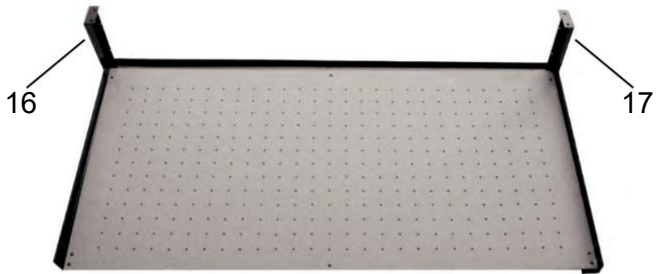

4) Position the left and right support brackets (16) and (17) on the work table corners, (using 4pcs 3 screws M6X0.39in)

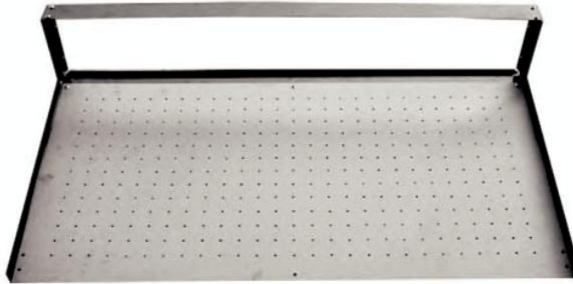

5) Fit a cross bar (18) between the two upper support brackets. (using 4pcs screws 3 M6X0.39in)




6) Mount the board (C) on the top of the frame. (using 4pcs trapping screws )


## Part 2



7) Put the left and right feet (21) and (21) on a flat surface.

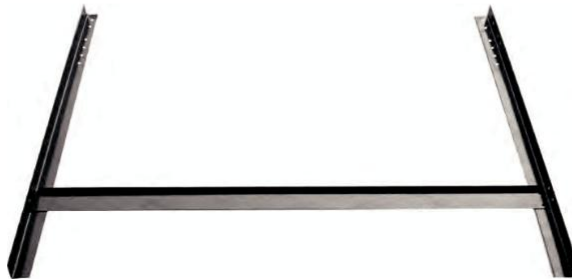

8) Joining the two real legs with a transverse bar (18).  
(using 4pcs 3 screws M6X0.39in)

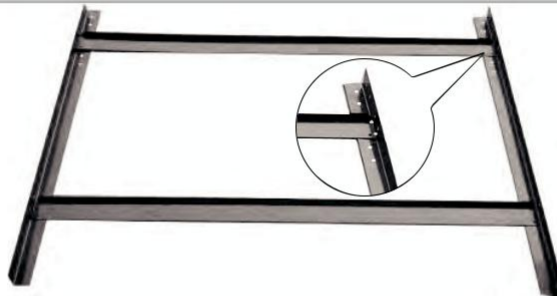

9) Fix another corss bar (14) on top the top of the feet.  
(using 4pcs 3 screws M6X0.39in)



10) Fix the four side rail (19) on the rear legs .  
(using 8pcs 3 screws M6X0.39in)



11) Fix the left and right front feet (20) and (20) on the side rails.(using 8pcs 3 screws M6X0.39in)



12) Fix two cross bars (18) between the front feet.  
(using 8pcs 3 screws M6X0.39in)

### Part 3



13) install (26) between the front foot (20) and back foot (21)  
(using 4pcs 3 screws M6X0.39in)→on the left of frame




14) install (25) between the front foot (20) and back foot (21)  
(using 4pcs 3 screws M6X0.39in)→on the right of frame



15) Put the left and right plate (22) and (22) on the floor



16) Install the plate (24) between (22) and (22)  
(using 4pcs 3 screws M6X0.39in)

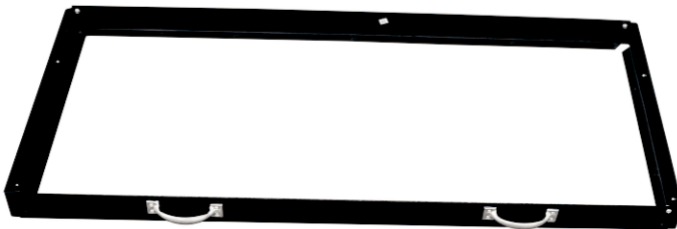

17) Install another plate (23) between (22) and (22)  
(using 4pcs 3 screws M6X0.39in)



18) Install the drawer board (E) and two handles to the drawer.  
(using 8pcs 4 screws M4X0.39in and 6pcs 2 screws M4X0.47in)


#### Part 4



19) Put the drawer into the frame of the work table.



20) Put the board (A) and (B) on the frame.

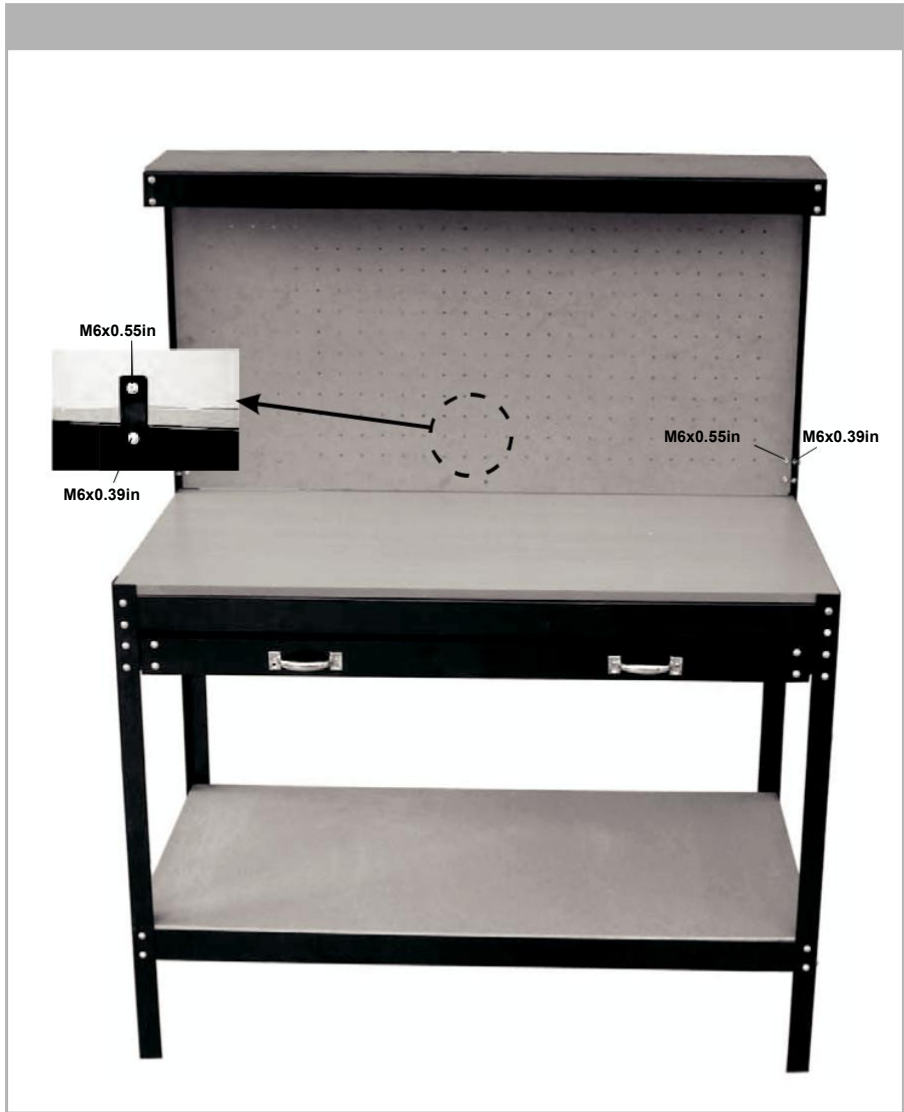

21) Install the small plate on the work table and fix the metal reinforcing perforation.(using 5pcs screws M6X0.39in and 5pcs 1 screws M6X0.55in)